
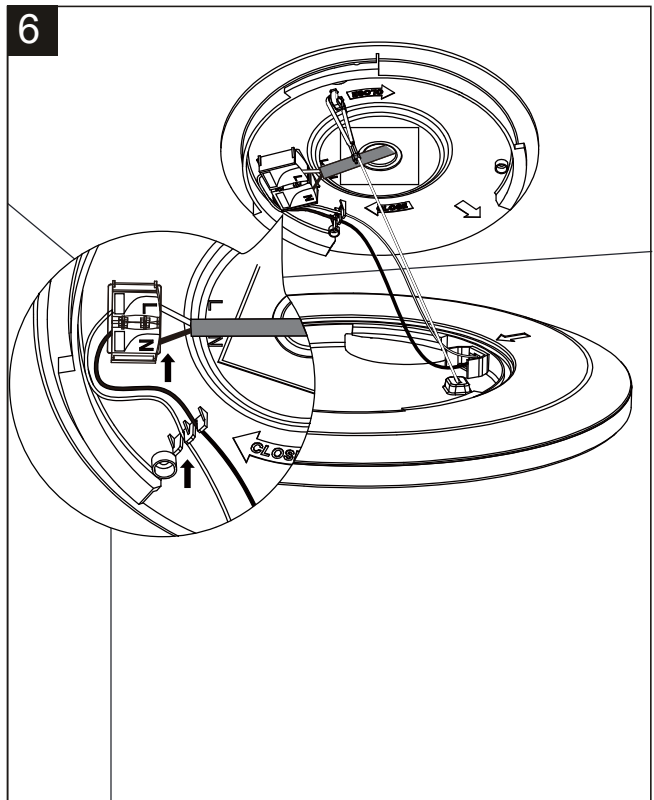
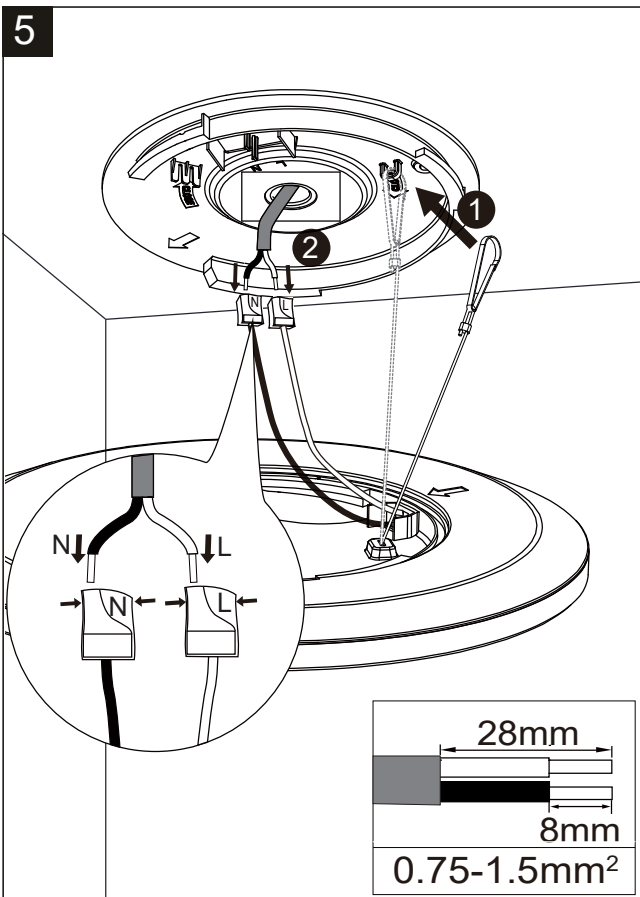
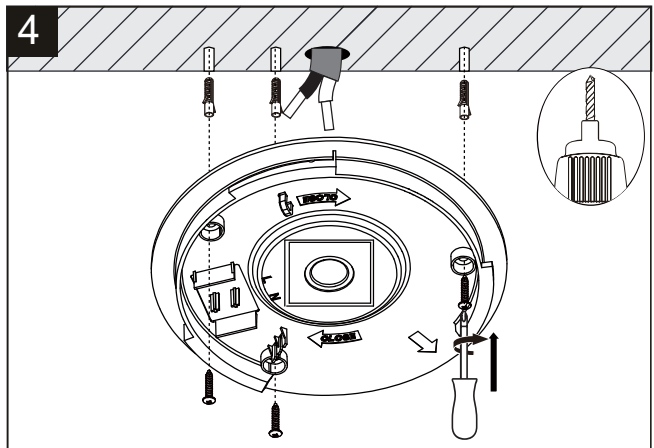
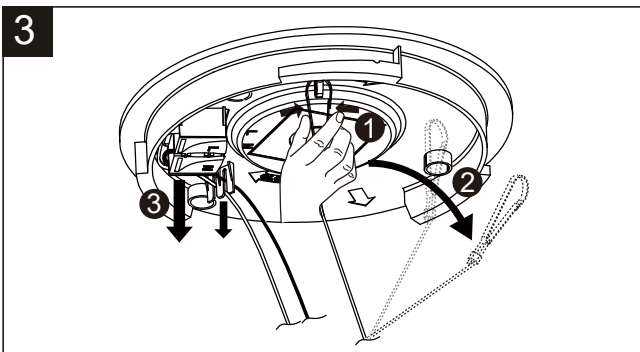
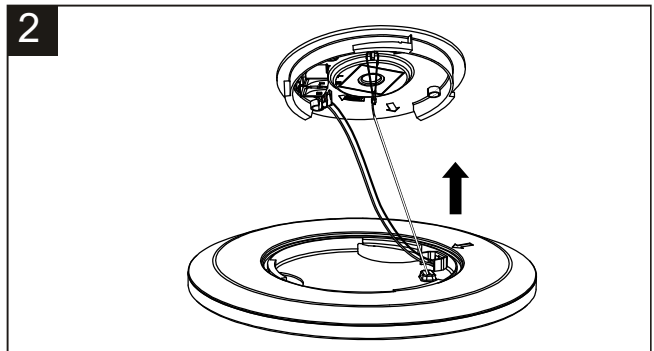




nordlux®

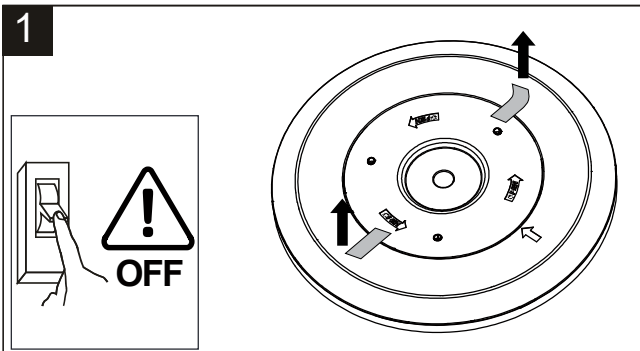


Monteringsanvisning | Montageanleitung | Mounting instruction | Installationsanvisningar | Instructions de montage | Montage-instructies

OJA SCENE SELECT


Item N°: 2015016101 | 2015106101

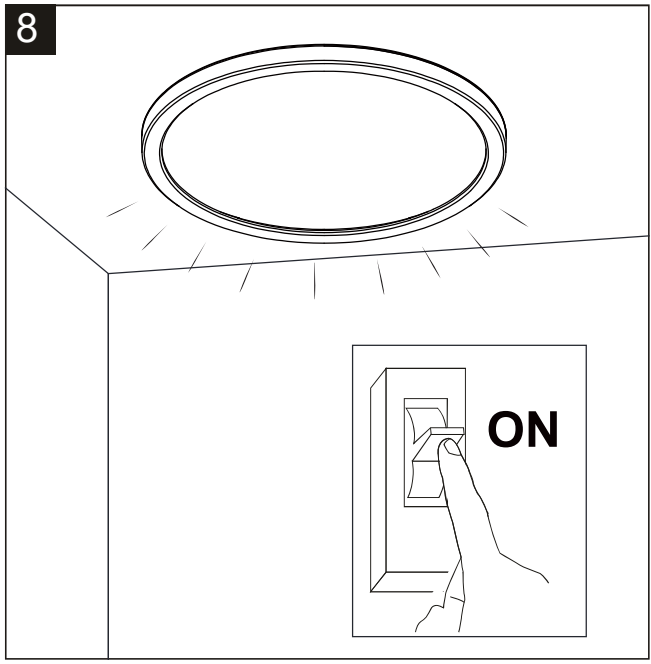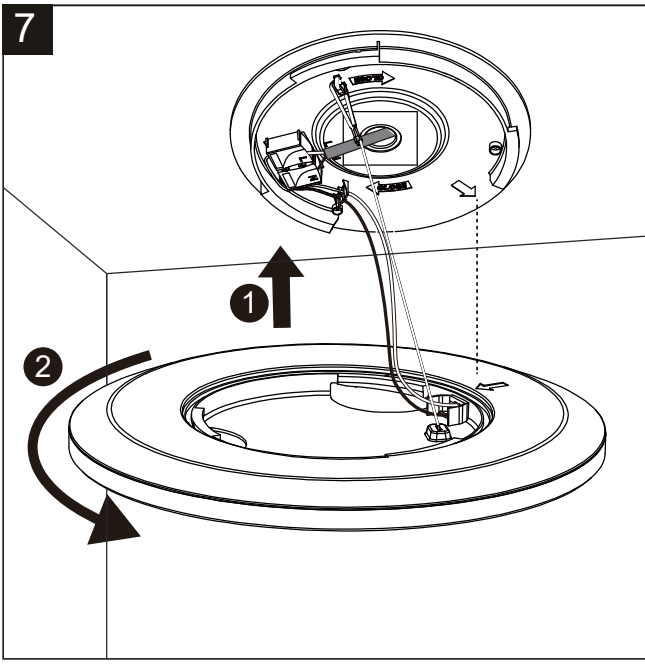

3-STEP MOODMAKER™ FUNCTION·WORKS WITH A NORMAL WALL SWITCH

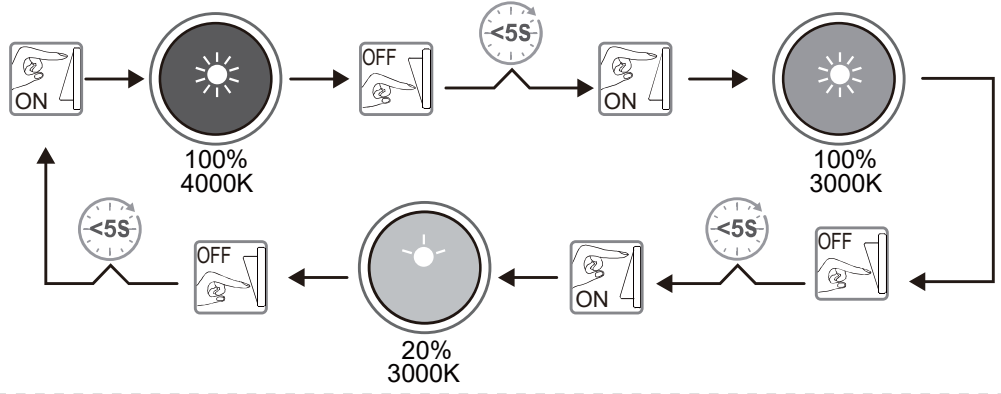

MEMORIZING PREVIOUS MODE

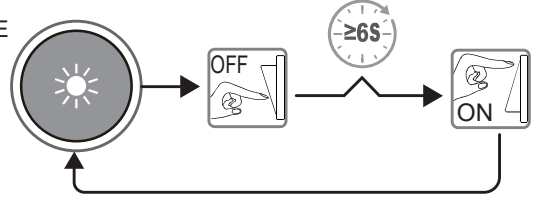

RESET FUNCTION

