ENDON®

Seville Floor Light

INSTRUCTION MANUAL

Safety Warnings

- These products are only suitable for connection to a 240V~50Hz supply in accordance with current IEE wiring Regulations and should be installed in accordance with local Building Regulations and are for indoor use only. They are not suitable for a Bathroom location.
- Do not plug into the mains until your lamp is fully assembled.
- Under no circumstances must this table lamp be covered with any material as this could pose a safety hazard. It must be used on a stable, flat surface.
- This product is not suitable for persons under 14 years of age.
- This lamp contains non-replaceable LEDs. Do not stare into the LED beam.
- If the mains cable or plug becomes damaged it must only be replaced by a technically competent, qualified person.
- If you are in any doubt about your competence please consult a qualified electrician.
- If any modification is made it will invalidate the warranty and may render the product unsafe.

Care Information

Allow 10 minutes to cool before adjusting or cleaning.
Clean with a dry cloth only. Do not use liquid or abrasive cleaners on this product.

Assembly/ User Instructions

Before you start

Please read these instructions carefully before fitting and retain for reference.
Check the packaging and make sure that you have all the required parts. Follow each assembly step in order to prevent incorrect assembly, and ensure that the product is fully assembled as illustrated before use.

These assembly diagrams are intended as a guide – if in doubt consult a qualified electrician.

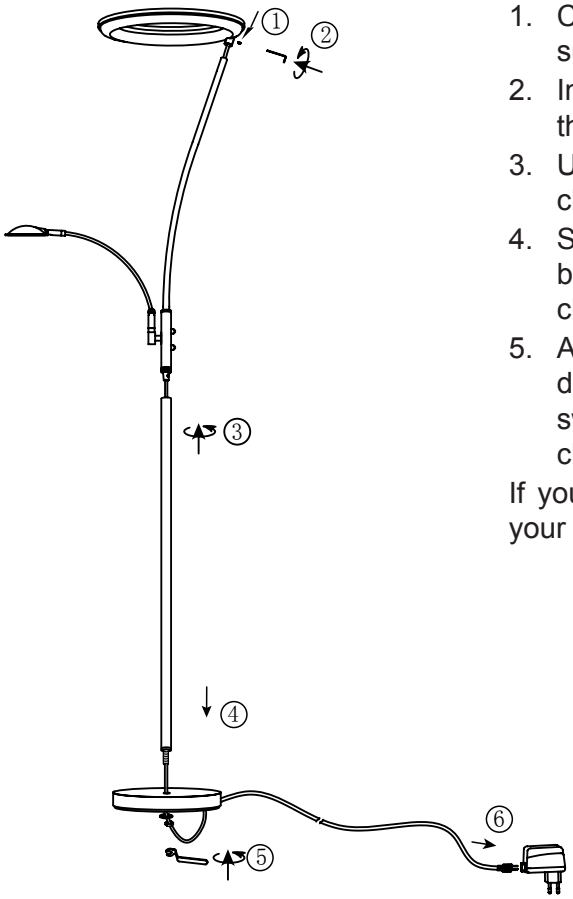

1. Carefully unpack your Lamp, and place your on a stable, flat surface.
2. Insert the top light into the top of the stem (1) and secure using the grub screw (2).
3. Use the spanner to affix the base weight (5), so that the flex channel is pointing in the required direction.
4. Screw the top stem into the main stem (3) and then into the base (4) and pull the flex through so it lies flat in the base-weight channel.
5. Attach the mains cable to the plug, then plug in and operate the double rotary dimmer switch to turn your Lamp on; the upper switch controls the main light, and the lower switch controls the child light.

If your Lamp will not illuminate, please check the relevant fuse in your Fuse Box. If unsuccessful please consult your Retailer.