

Assembly Instructions

ABY1002W

- We recommend that only a qualified electrician should fit this Luminaire. Installation must be in accordance with I.E.E. regulations. Do not attempt this work unless you are competent to install electrical wiring.

- fixings are not provided with this Luminaire. Ensure you use the correct fixings for your wall type.

- Before commencing installation or servicing, isolate the circuit to be used by removing the fuse or circuit breaker at the distribution unit.

- This fitting is heavy ensure that the structure you are fixing to is strong enough to safely take the weight.

Ensure you use the correct fixings or 'wall anchors'

- Take note of any hidden wires or pipes in the area before commencing and take care not to damage existing wiring or pipes during installation.

- First determine the position of the wall bracket. Consider that the wall bracket must cover the wiring and associated hole in the wall.

- Mark with a pencil the position of the top hole. Check for wires in the vicinity, making sure you don't damage any cables drill a hole and using a suitable wall anchor loosely secure the top of the fitting.

- You can now accurately mark the position of the lower hole with a pencil. Remove the top screw again and carefully drill the lower hole and push in a suitable wall anchor.


- Connect the existing house wiring to the terminal block as shown in Fig 2.

- Fully tighten all connection ensuring the screws clamp the metal conductors and not the plastic insulation.

- Close the enclosure and check that all the insulation is inside the enclosure box and there are no trapped wires. Ensure the enclosure box is firmly closed.

- Place the insulation box and wiring inside the wall making sure not to damage any cables.

- Attach the fitting to the wall using the supplied screws.

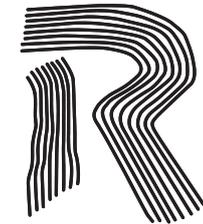

ROCHAMP

by *Interiors 1900*


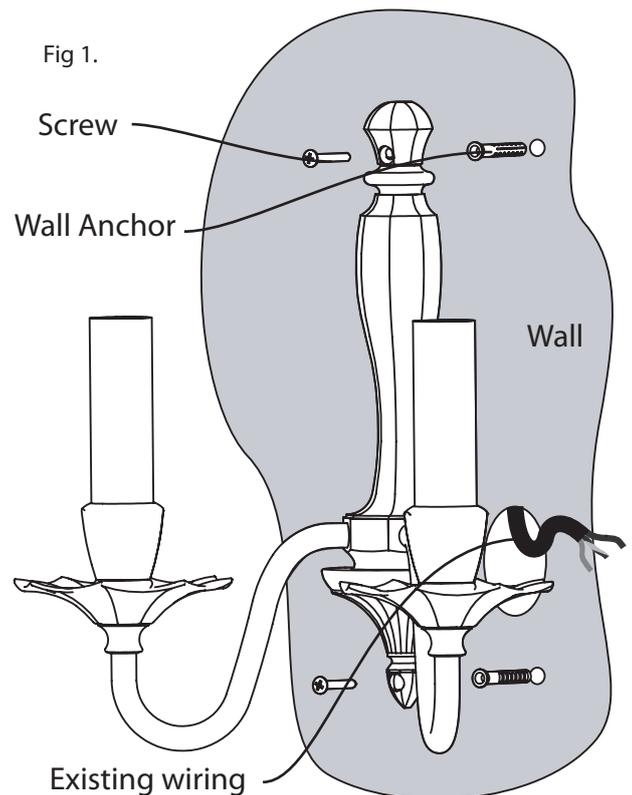


Fig 2.



www.interiors1900.co.uk

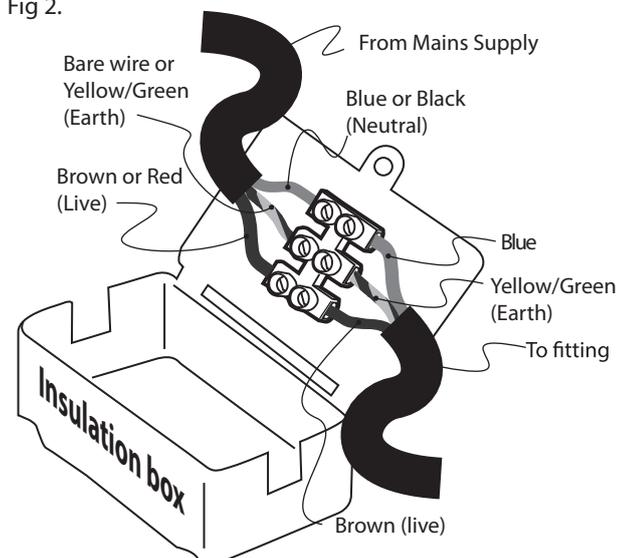

Suitable for indoor use only.

Fig 3.

- See fig. 3. Your wall lamp is supplied with two sets of sleeves, the short sleeve enables the use of the shade ring to accommodate soft shades (sold separately) and the long sleeve is to be used with 'bare bulbs'. These can easily be swapped by removing the shade ring. Unscrewing the candle drip from the fitting and replacing with the alternative candle drip.

- If using a soft shade fit the shorter candle drips. Position the shade on the bulb holder and secure with the plastic shade ring.

- Insert the correct bulbs as marked on the bulb holders (No greater than 40watt.) Turn on the electricity and test the fitting. If the fitting does not light or trips. Turn off the electricity immediately and consult an electrician.

