


# Assembly Instructions

## Wall Lamps

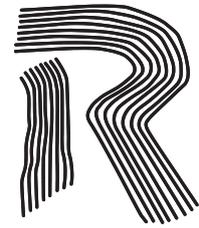

ROCHAMP  
by  
*Interiors 1900*

- Always turn off the mains supply at the consumer unit, shut off the Circuit breaker or remove the circuit fuse before commencing installation.
- This fixture should only be installed by a qualified electrician.
- This fixture is suitable for indoor use only.
- This fitting is not suitable for use in areas of high moisture (bathrooms etc).
- Fittings are not supplied, please ensure you use suitable fittings for your wall type
- Do not exceed the maximum wattage recommended on lamp holder.
- Lamps become very hot, ensure they have had time to cool before handling the light bulbs.
- If the external flexible cable of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- This fitting will get hot. Only attach to fire retardant surfaces.

Fig. 1


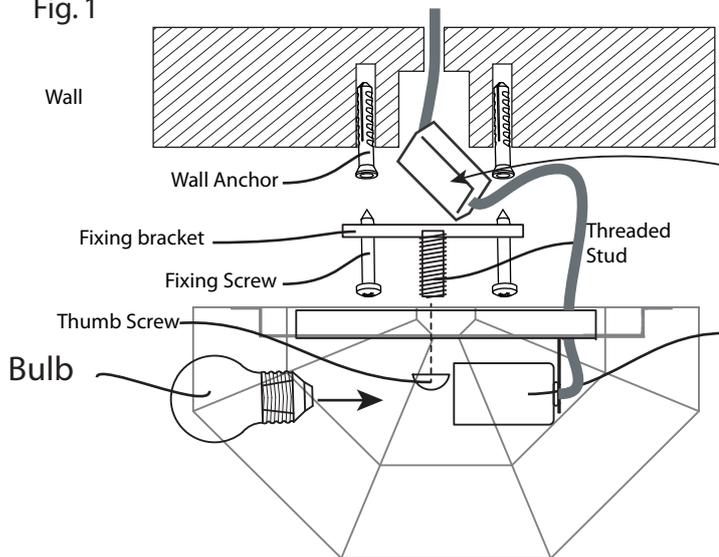


Fig. 2

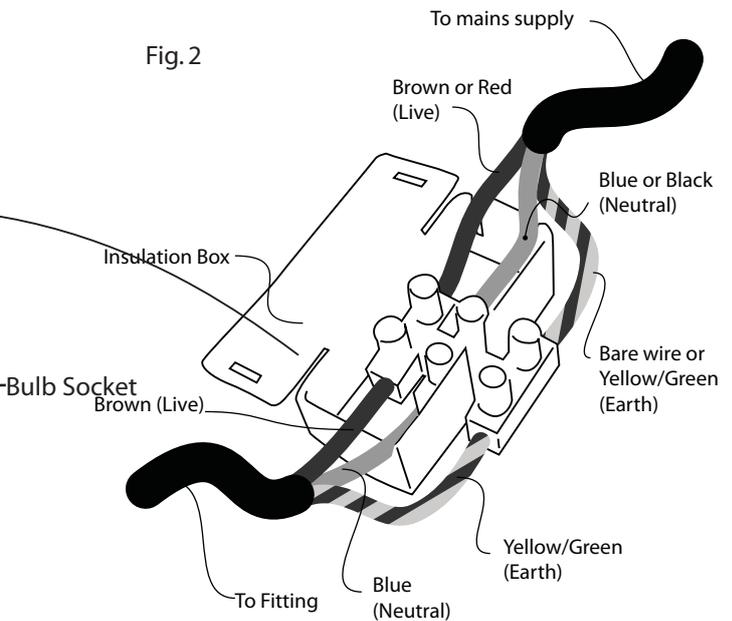

### 1. Attach the fitting to the wall

- Determine the position of your light fitting ensuring that the mains cable from the building can easily reach the terminal block. Then mark the position of the three mounting holes on the main plate.

- Ensuring that you do not damage any pipes or wires in the wall. Drill the holes for mounting fixings (using the appropriate size drill for the fitting type). Attach the fixing bracket to the wall using appropriate wall plugs and screws. If screws are provided ensure they are suitable for your wall construction, if in doubt purchase new screws and wall plugs.

### 2. To wire the fitting (fig. 2)

- Ensure mains supply is switched off
- Using a connector block, connect the following cables
  - The earth (green&yellow) from the fitting to the earth (green&yellow) from the mains supply.
  - The neutral (blue) from the fitting to the neutral (blue or black) from the mains supply.
  - The live (brown) from the fitting to the live (red or brown) from the mains supply.

### Before proceeding please ensure:

- That the insulation goes right up to terminal
- That no bare wire is showing.
- All terminal screws are fully tightened and each wire is secure.
- Only the Yellow/Green Earth wire should be on the outside of the insulation box

Close the insulation box and ensure that there are no single insulated wires exposed outside the insulation box.

### 3. Attach the lamp bod to the fixing bracket

- ensuring that the insulation box and cables remain within white backplate, attach the lamp fitting to the fixing bracket using the domed thumb screw to secure.

[www.interiors1900.co.uk](http://www.interiors1900.co.uk)